

GB Thank you for choosing a HabiStat product. Please read the instructions carefully and refer to diagrams before use. Retain all documents for future reference.

The HabiStat Rainmaker has its own 2.2L reservoir **2** and delivers an adjustable spray of rain into an enclosure by using the multi-directional nozzles **4**. These should be positioned on the inside of the enclosure towards the top by using the suction pads **A**. Cut the Black Tubing **5** to length and connect to the Blue connectors on the nozzles **4**. Push the connector seal down feeding the end of the black tube into the main unit as far down as it will go (roughly 1 to 2 cm). Release the blue connector **B** to secure the black tube in place.

If using a second nozzle (within the original enclosure or a second enclosure) cut a suitably sized length of black tubing and attach the second nozzle using the above method. Then use the end cap **6** after your last nozzle is in place.

Connect approximately 30cm piece of black tubing to the underside of the main unit **C** and screw in the filter **3** to the bottom of the tube. Place the main unit on a stable, hard surface, fill the 2.2L reservoir **2** with water. Do not overfill. Adjust the CYCLE(H) **E** to set how often it will rain. The units are in hours. Adjust the DURATION(S) **F** to set how long it will rain for. The units are in seconds. Plug in the power adaptor **7** and connect into the back of the main unit **H**. Turn the POWER on **G** and adjust the rain intensity from min to max as required. The unit will begin to “rain” after the hours set on the CYCLE(H) **E**. If you want to operate the unit manually leave the CYCLE(H) **E** set at “0” and the unit will turn on immediately the POWER **G** is switched on. The unit will not turn off until POWER **G** is switched off in this mode.

Warning:

- Only add clean water to the unit.
- Ensure that the Rainmaker is placed on a stable, hard surface.
- Before connecting the device, confirm the voltage first. It can only be connected to power with 100-240V – 50/60HZ.
- Do not let the unit run dry as this may damage the pump.
- For indoor use only.

- Clean the tank every 2-3 weeks to avoid the build up of limescale. Wipe with a soft, damp cloth with a small amount of detergent and rinse with clean water.
- Ensure any necessary repairs are carried out by the manufacturer or service agent.
- The manufacturer shall not be responsible for any damage to the product or accidents caused by the user’s failure to comply with the requirements listed.

HabiStat Rainmaker Instruction Manual



- 1** Main Unit
- 2** 2.2L Reservoir
- 3** Filter
- 4** 2xNozzles
- 5** 5M Black Tubing
- 6** Tubing end cap
- 7** Power Adaptor

